



WINDOW AND DOOR PARTS

THOMAS, CARPENTER AND BLUE BIRD

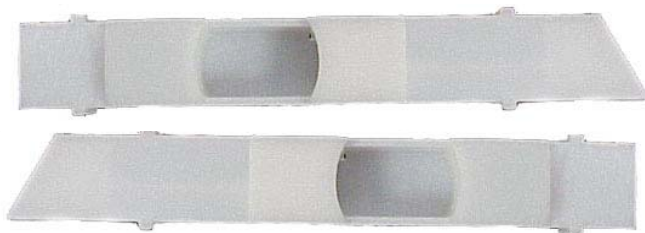

<u>PART NUMBER</u>	<u>DESCRIPTION</u>
8545-0081	RH WINDOW LATCH
8545-0082	LH WINDOW LATCH
8545-0080	KIT, SPRING&BLOCK

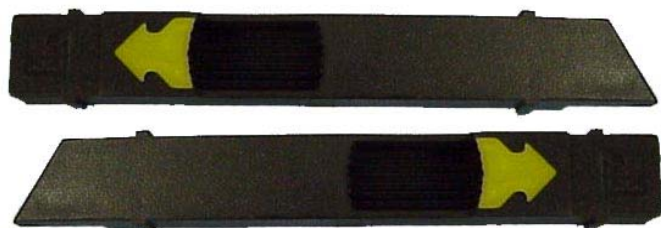

<u>PART NUMBER</u>	<u>DESCRIPTION</u>
210054-019	RH HEHR WINDOW LATCH
210054-020	LH HEHR WINDOW LATCH

WARD BUTTERFLY LATCHES



<u>PART NUMBER</u>	<u>DESCRIPTION</u>
6623002	LH WARD LATCH



<u>PART NUMBER</u>	<u>DESCRIPTION</u>
6623001	RH WARD LATCH

CARPENTER, WAYNE, AMTRAN OR THOMAS



<u>PART NUMBER</u>	<u>DESCRIPTION</u>
13-5628	THUMB LATCH

BLUE BIRD



<u>PART NUMBER</u>	<u>DESCRIPTION</u>
2176584	GREY THUMB LATCH



<u>PART NUMBER</u>	<u>DESCRIPTION</u>
501-2377	RH WINDOW BOLT
501-1377	LH WINDOW BOLT
<i>FITS AMTRAN, CARPENTER, THOMAS AND WAYNE</i>	
2176568	LH WINDOW BOLT
2176576	RH WINDOW BOLT
<i>FITS BLUE BIRD</i>	




<u>PART NUMBER</u>	<u>DESCRIPTION</u>
503-9369	SPRING FOR ABOVE LATCHES
210054-021	SPRING FOR HEHR LATCHES
210054-022	BLOCK FOR HEHR LATCHES


WINDOW AND DOOR PARTS




HEHR WINDOW SWITCH
210055-025
RETENTION SPRING
110-160

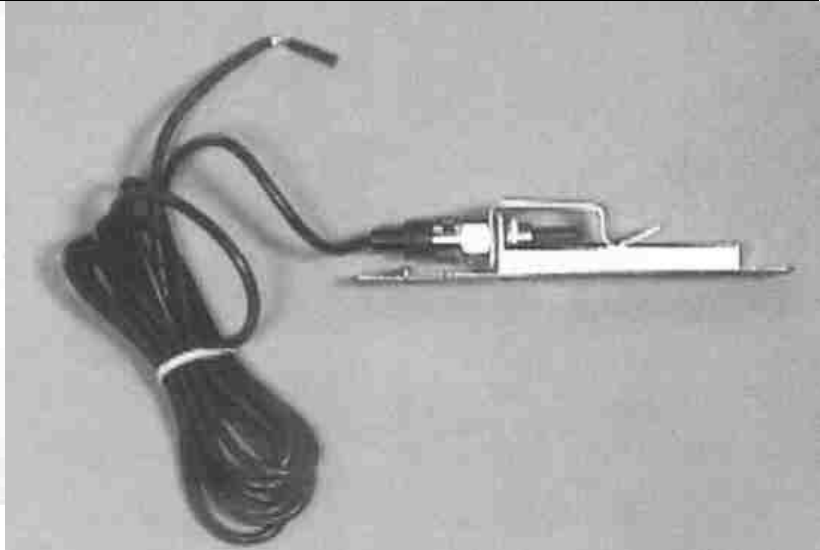

WELLS WINDOW SWITCH
6-0759

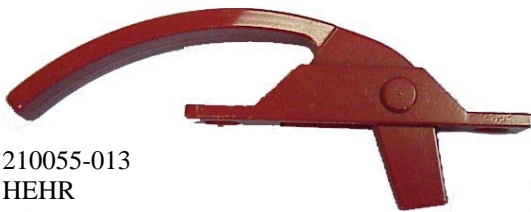

210055-013
HEHR
P/O WINDOW HANDLE

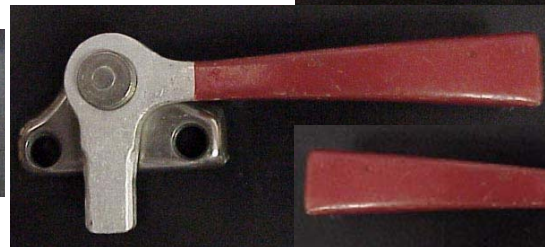

AMTRAN
431852024




LONG HANDLED
PUSH OUT WINDOW
LATCH
FITS THOMAS
AMTRAN, CARPENTER
AND OTHERS
4500-3571

WELLS OLD STYLE
68374R RT P/O HANDLE*
68374L LT P/O HANDLE*
**THESE ITEMS ARE IN SHORT SUPPLY AND
WILL INTERCHANGE WITH PART NUMBERS
LISTED BELOW*

WELLS OLD STYLE WITH RED GRIP
414711002 RT P/O HANDLE
414711001 LT P/O HANDLE

WINDOW AND DOOR PARTS

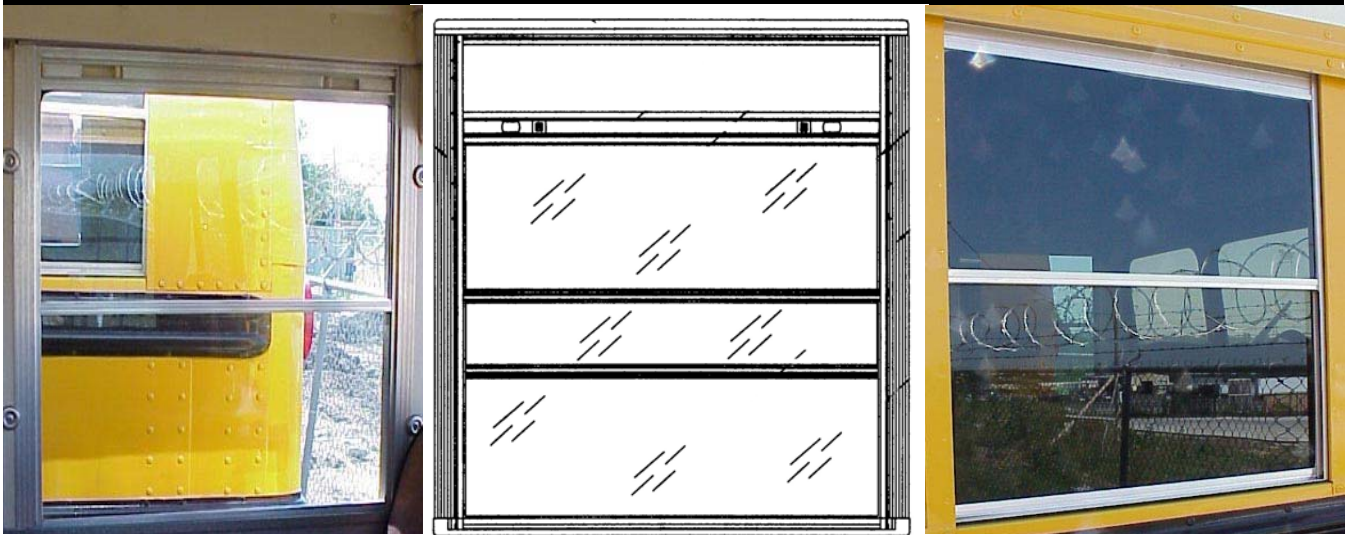

WE STOCK WINDOW PARTS AND GLASS FOR PASSENGER WINDOWS AND DRIVERS WINDOWS

PLEASE HAVE THE FOLLOWING INFO WHEN ORDERING

YEAR, MAKE AND MODEL OF THE BUS

AS WELL AS THE BODY SERIAL NUMBER AND/OR THE PARTS ORDER NUMBER
THE HEAD ROOM OF THE BUS

(YOU CAN GET THIS BY MEASURING THE FLOOR TO CEILING HEIGHT IN THE CENTER AISLE OF THE BUS)

WE ALSO NEED TO KNOW IF THE GLASS BEING REPLACED IS TINTED OR CLEAR
AND IF IT IS TEMPERED OR LAMINATED GLASS

(TEMPERED GLASS WILL SHATTER WHEN BROKEN AND LAMINATED GLASS CRACKS LIKE WINDSHIELDS)

PARTS AVAILABLE

- PUSH OUT WINDOW SWITCHES •SEALS •HANDLES
- GLASS •FRAME PIECES •GLAZING RUBBER
- LATCHES •SPRINGS •LATCH BOLTS
- COMPLETE WINDOW ASSEMBLIES

1-800-460-2877

WINDOW AND DOOR PARTS

AMTRAN

PART NUMBER
092008300*
REAR DOOR HANDLE
NEW STYLE

*KIT COMES WITH
HANDLE, SET SCREW AND
COUNTER SUNK SCREW



**WE HAVE THE
RIGHT PARTS
TO GET THE
JOB DONE**

BLUE BIRD

PART NUMBER
0949834
3 1/4" SHAFT
REAR DOOR HANDLE
0949818
4 5/8" SHAFT
REAR DOOR HANDLE



CARPENTER

PART NUMBER
50944
REAR DOOR HANDLE
*ALSO USED ON
LIFT DOORS AND LEFT
SIDE
EMERGENCY DOORS*



**IF IT GOES ON
A SCHOOL BUS
GIVE US A
CALL
1-800-460-2877**

MID BUS

PART NUMBER
361418*
REAR DOOR HANDLE

*KIT COMES WITH
HANDLE, SET SCREW AND
COUNTER SUNK SCREW



THOMAS

PART NUMBER
2406-2376
REAR DOOR HANDLE



WARD

PART NUMBER
007871101
REAR DOOR HANDLE
OLD STYLE




WAYNE

LIMITED SUPPLY
PART NUMBER
W066044-002
REAR DOOR
HANDLE




1-800-460-2877

WINDOW AND DOOR PARTS

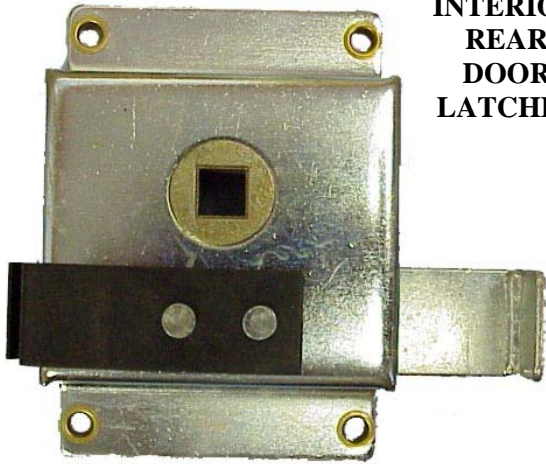

**INTERIOR
REAR
DOOR
LATCHES**

**INTERIOR
REAR
DOOR
HANDLES**

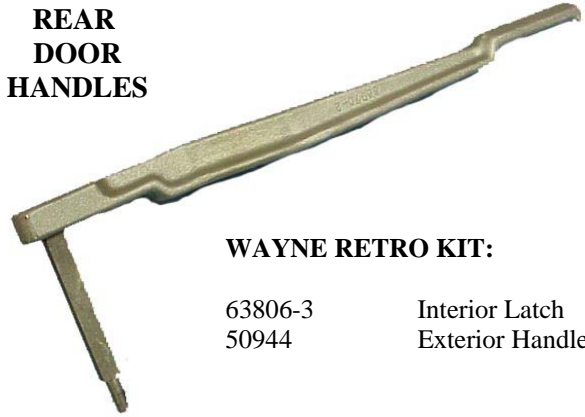


WAYNE RETRO KIT:

63806-3
50944

Interior Latch
Exterior Handle

**TO ORDER INTERIOR REAR EMERGENCY DOOR LATCHES OR HANDLES
PLEASE CALL WITH THE YEAR MAKE AND MODEL OF YOUR BUS
THESE LATCHES AND HANDLES ALSO FIT THE WHEELCHAIR LIFT DOORS**

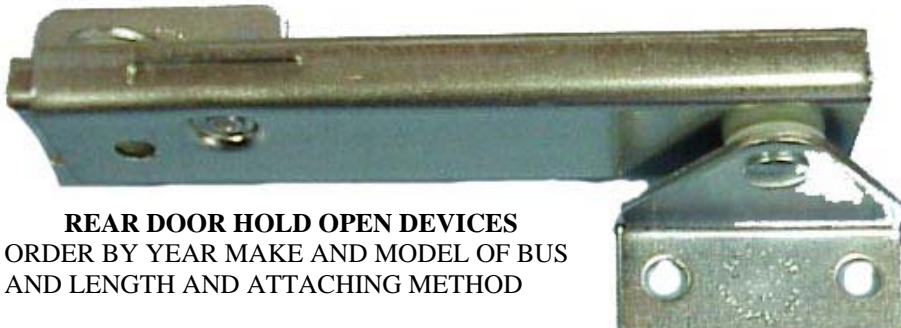

REAR DOOR HOLD OPEN DEVICES
ORDER BY YEAR MAKE AND MODEL OF BUS
AND LENGTH AND ATTACHING METHOD

SCHOOL BUSES EQUIPPED
WITH REAR DOOR HOLD OPEN
DEVICES FROM THE FACTORY
ARE REQUIRED BY LAW TO
HAVE THEM.
IT IS IN VIOLATION FMVSS TO
REMOVE THEM OR TO
REPLACE THEM WITH ANY
OTHER TYPE DEVICE THAT
DOES NOT MEET THE FMVSS

ONE STOP BUS STOP

1440 S. LOOP 12

IRVING, TEXAS

75060

WINDOW AND DOOR PARTS



REAR DOOR AND "D" GLASS

PLEASE HAVE THE FOLLOWING INFO
WHEN ORDERING

YEAR, MAKE AND MODEL OF THE BUS
AS WELL AS THE BODY SERIAL NUMBER
AND/OR THE PARTS ORDER NUMBER
THE HEAD ROOM OF THE BUS

*(YOU CAN GET THIS BY MEASURING THE FLOOR TO
CEILING HEIGHT IN THE CENTER AISLE OF THE BUS)*

WE ALSO NEED TO KNOW IF THE GLASS
BEING REPLACED IS TINTED OR CLEAR
AND IF IT IS TEMPERED OR LAMINATED
GLASS

*(TEMPERED GLASS WILL SHATTER WHEN BROKEN AND
LAMINATED GLASS CRACKS LIKE WINDSHIELDS)*



**FOR ALL MAKES OF BUSES
FLAT WINDSHIELDS**

**BLUE BIRD
CURVED WINDSHIELDS**

PLEASE HAVE THE FOLLOWING INFO WHEN ORDERING
YEAR, MAKE AND MODEL OF THE BUS

AS WELL AS THE BODY SERIAL NUMBER AND/OR THE PARTS ORDER NUMBER
THE HEAD ROOM OF THE BUS

(YOU CAN GET THIS BY MEASURING THE FLOOR TO CEILING HEIGHT IN THE CENTER AISLE OF THE BUS)

WE HAVE THE RUBBER SEALS AND KEY RUBBER TO MAKE INSTALLING YOUR GLASS A
EASY TASK

